


## RD300 Refrigerant Leak Detector



Extech's Refrigerant Leak Detector is easy to use and is ideal for detecting leakages from air-conditioning units and cooling systems that use all standard refrigerants. The multi-colored LED light bar indicates the level of leaking refrigerant detected by the RD300. The built-in, bright LED convenience light located at the sensor tip illuminates dimly lit inspection areas.

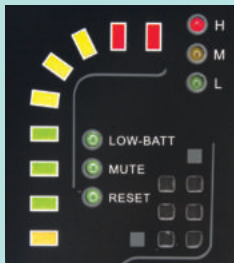

### Features

- Detects all standard refrigerants using a heated diode sensor
- LED light at probe tip (with on/off switch) for working in dimly lit areas
- LEDs display user-selectable High/Medium/Low levels with sensitivity of 0.25/0.50/0.99 oz per year
- Audible and Visual alert with mute button
- Low battery indicator
- Field replaceable sensor (RD300-S) and LED light tip (RD300-L)
- Dimensions: 7.2x2.8x1.6" (184x70x40mm)  
Weight: 10oz (280g)
- Complete with leak test bottle, 9V battery, and protective hard carrying case

### Ordering

- RD300..... Refrigerant Leak Detector
- RD300-S..... Replacement Heated Diode Sensor Tip
- RD300-L..... Replacement LED Light Tip

